USER MANUAL

SYTECH®

When technology turns to art

CHOCOLATE FOUNTAIN

SY·FC3

WELCOME

Welcome to Sytech! Thank you for purchasing the Chocolate Fondue Fountain SY-FC3. Please read this manual carefully before operating your product and pay close attention to the precautions which are mentioned below. Store this user manual in a safe place for future reference.

IMPORTANT PRECAUTIONS

- The appliance must be connected to a voltage supply of 220 V – 240 V Only.
- This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cable is damaged, contact Sytech Hotline Service Centre for a proper repair or exchange. This will avoid any hazard.
- Do not allow the power cable to hang down with easy reach. Keep children away from the packaging material (e.g. plastic bags).
- Never pull the plug out of the socket by the cable or with wet hands. Disconnect the mains plug in case of faults during use, before cleaning or moving the appliance from place to place, after use.
- Regularly check if the mains cable/ appliance/ extension lead are in perfect state. In the contrary, the appliance must not be put into operation (immediately pull out the plug). Contact the Sytech Service Centre for reparation.
- Only trained personal should repair electrical appliances. Unskilled repairs can cause considerable danger to the user.
- Do not leave the unit unattended when it is connected
- Be careful when manipulating with the unit and avoid contact of the skin with the parts that become hot
- Keep the cable away from places where heat is present
- Do not use this unit with a voltage converter
- Do not use an extension cord with this unit.
- No warranty for any possible damage can be accepted if the appliance is used for improper purpose, wrongly operated or unprofessionally repaired. In such case, any warranty claim is void.
- Do not use any attachments that are not recommended by the manufacturer.
- The appliance should not be operated by means of an external timer or separate remote-control system.
- Never put the appliance / cable on hot surfaces or near open flames.
- The appliance is designed for household use and not for industrial operation. Do not operate the appliance outdoor.
- Never place the appliance on soft cushions/pillows or blankets during operation.
- Never carry or pull the appliance by the cable, don’t pull the cable over sharp edges. Do not jam or bend the cable.
- Switch the appliance off and pull the plug out of the mains when it is not in use. Don’t wind the cable around the appliance.

PARTS OF THE SY-FC3

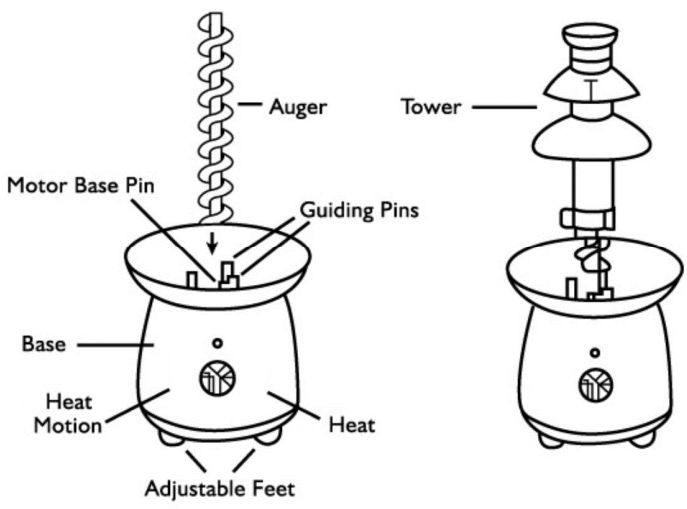

INSTRUCTIONS

The chocolate fountain is easy to use, please follow these instructions carefully

1- Make sure that the fountain is disconnected at first. Then proceed to assemble the chocolate fountain. To do this, place the rotating plastic piece into the base of the chocolate fountain and then place the 3 tiers tower over the rotating plastic piece and fix it on the base.
2- Place the apparatus on a stable surface close to an electric point. Make sure that the apparatus is positioned horizontally. It is important that the apparatus is positioned horizontally to obtain the desired result.
3- Turn the heating button to the “HEAT” position.
In the meantime melt about 350gr of chocolate mixed with half a glass of butter or oil. If your chocolate has high cocoa content then it may not be necessary to add the melted butter or oil. Melt it in the microwave and stir it until it has a smooth and liquid texture.
4- Pour the melted chocolate into the bowl located on the apparatus base. Fill it to the brim. Turn the switch to the “HEAT MOTOR” position and the rotating plastic piece will allow the chocolate to flow till the top and attain the chocolate fountain effect.
5- To stop the apparatus, turn the switch to “OFF”

For the best results, add only melted chocolate. Never use other products in the base bowl except those meant for this purpose
Remember to check that no pieces of food are obstructing the base because these can block the flow of the chocolate.

CLEANING

- Disconnect the apparatus before cleaning. Take out the rotating plastic piece and the 3 layer tower after the apparatus cools, clean with soapy water.
- Pour the remaining fluid from the base then clean with a soapy sponge.
- Never plunge the base in water.
- Do not use abrasive products to clean this apparatus.

SPECIFICATIONS

- Power: 85 Watts
- Voltage: 230V – 50Hz
- Base capacity: up to 600ml of chocolate
- Dimensions: 190X190X340MM
- Weight: 1.2Kgs

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Chocolate Fondue Fountain
Sytech® SY-FC3 complies with the following directives:

CE Standard: Directive 2004/108/CE
LVD Standard: 2006/95/EC
ROHS Standard: 2011/65/EU Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator